

Window Treatments NZ Ltd is the exclusive Fabricator and Distributor of Yewdale Hospital curtain tracks in New Zealand. Fabricated right here in New Zealand, Window Treatments not only fabricates but provides a nationwide measure, quote and

www.window-treatments.co.nz

Hassle-free screening systems

By Window Treatments NZ Ltd

# yewdale Movatrack CUBICLE AND TRACK SYSTEMS

Non anti-ligature cubicle tracks, shower tracks & curtains.

By Window Treatments NZ Ltd



# YewdaleMovatrack® the cubicle track range

The industry's preferred choice of privacy track systems providing enhanced personal welfare throughout the entire healthcare and public sectors.

With aluminium profiling for long life durability, Biosafe accreditation for effective infection control, and aesthetic qualities to blend it in anywhere, the YewdaleMovatrack® system has been developed with the user in mind.



#### **Preferred Cubical Track**

It's not difficult to see what makes
YewdaleMovatrack® a preferred choice
throughout the industry from architects
and contractors, to nursing staff and
clinicians alike. It starts off with small
differences like the free-running, snagfree roller wheeled curtain hooks, and the
unique press-slide curtain removal point
which allows curtains to be removed and
replaced swiftly. Then there's the
dependability of the rigid aluminium
track profile and its ability to be able to
span 3m between hangers. Find out more
inside.

# SPECIFICATION

ical ne**alth** 

100 Cubicle Track
Premium quality fixed aluminium track
system providing high levels of privacy
and dignity.





#### YewdaleMovatrack® Cubicle & Track Systems

All YewdaleMovatrack® systems are carefully built to exacting standards, giving years of trouble-free service. The superior design features and quality components enable them to be confidently specified for the most demanding environments.

All YewdaleMovatrack® systems are constructed from premium grade, aluminium for hassle-free requirements, and can be found working effectively in hospitals, clinics, sports centres, schools and other public buildings.

The YewdaleMovatrack® cubicle track programme is one of the most highly regarded in the UK, offering simple telescopic divider rails for areas of restricted space through to large scale, permanent suspended fixtures for entire hospital solutions.

The YewdaleHarrier® range of curtains has been developed to provide an in-stock solution and perfect accompaniment to the YewdaleMovatrack®.

It encompasses a full anti-bacterial portfolio ranging from disposable to high grade, machine washable. All of which are flame-retardant to

All YewdaleMovatrack® systems are available in fully made to measure form completely ready for installation, or in a comprehensive individual component form for ease of use within any in-house manufacturing facility. The full range is distributed globally through a network of dealers and customers providing an unrivalled level of support, and with experienced installation and service teams to exceed your expectations.









# Operational Maintenance & Guidance:

It is an NHS requirement that cubicle tracks should be installed following manufacturer's guidance and comply with HBN 00-10 Part E. Installation should be completed by competent installers, ideally those who have received training offered by Yewdale. YewdaleMovatrack® systems should be maintained and their performance monitored in line with manufacturer's instructions.

HBN 00-10 Part E states that, "All tracking should be tested annually as per manufacturer's instructions to ensure that changes made to the configuration or environmental conditions have not adversely affected performance."

Annual inspection and testing of YewdaleMovatrack® systems should only be carried out by Window Treatments NZ Ltd Ph 0800 36 36 39

# In accordance with HBN 00-10 Part E guidance on cubicle tracks in hospitals:

- The manufacturer's recommendations in respect of periodic inspection and maintenance should be followed to ensure that acceptable levels of performance are maintained.
- Track suspension should have breaking strength of no less than 180kg.
- Gliders and runners and track-wearing surfaces should be capable of withstanding at least 20,000 cycles of curtain movement without appreciable loss of quietness or smoothness in operation, or visible wear.
- Parts of a system should be non-combustible as defined in BS 476-4:1970.
- Track parts must be corrosion-resistant materials, not a health hazard or emit toxic products in a fire.
- All privacy/cubicle tracks to have tool-free access points for hassle-free loading and unloading of curtains.
- A planned preventative maintenance policy should be followed.
- Gliders and other components must be compatible with the system in use and not of a different type/make.

#### Cleaning

HBN 00-10 Part E states that the design, materials and workmanship of a system should be capable of withstanding the cleaning regimes in use and when installed, will not generate dust or dirt.

In accordance with NHS National Standards of Healthcare Cleanliness 2021, "Staff should fully understand the cleaning frequencies their work areas require and follow these closely.

When room use or priorities change, the cleaning frequencies for the area should be reviewed." Cleaning should be consistent with IPC standards and requirements.



#### The YewdaleMovatrack® Cubicle Track

By Window Treatments NZ Ltd



# What unique features make this cubicle track system so popular?

All areas of the care community; hospitals, clinics, and health conscious institutions all over the world treat the care of their service users with a very high level of interest.

To enable them to uphold an environment that is conducive towards peace, calm and recovery requires equipment and systems that are simple to use and require nominal on-going maintenance. Not only does installing these features pay dividends towards carer job satisfaction, they ultimately help the longevity of the care plan by ruling out the requirements of continual maintenance costs.


# With an ever-increasing host of options available to the healthcare sector, why should more thought go into a cubicle track system?

Many systems available provide only the minimum number of factors required to offer a suitable privacy solution, suiting contractor budget constraints rather than ensuring staff and service user well-being.

For help when making your next decision, or to check how your current system fares in regard to the industry standard, have a quick read through the points listed below. If you would like a non-obligatory view of your present system from an unbiased advisor, please call the specialist support team on 0800 36 36 39.

## Roller Wheel Curtain Hooks

The free-running roller wheel curtain hooks offered with the YewdaleMovatrack® system as standard never cease to be noticed by nursing staff who had grown accustomed to ordinary cubicle track systems. Even after years of use, curtains using these will be light and easy to draw. They won't even jam on bends!

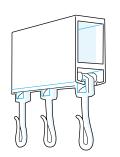

## Premium Aluminium Profile

The core of the YewdaleMovatrack® system is based around its sturdy, yet unobtrusive, profile.

High grade aluminium and with no additional separate parts upholds the integrity of the product allowing it to span 3.0m between supports with no flexing or sag.

#### **Cubicle Numbering System**

The separating of individual bed bays by means of a numbering system is an absolutely essential form of identification in hospitals, clinics, surgeries and the like.

The clearly visable design of the Cubicle Numbering System provides a perfect solution to all open ward requirements. They ensure clear, instant and permanent visibility and yet still offer the convenience of tool-free repositioning whenever required.






**By Window Treatments NZ Ltd** 



#### **Curtain Removal Point**

Every track gets fitted with a unique press-slide curtain removal point, allowing curtains to be removed swiftly, complete with hooks.

It is of no surprise that this alone reduces maintenance time and improves infection control. No more attempting to remove soiled curtains from the track height at a stretch!

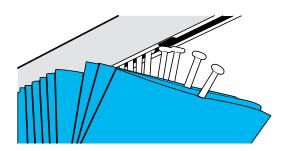

#### **Installer friendly**

Not only do nursing staff prefer the ease of use, many installers would rather fit YewdaleMovatrack® than any other profile. The simple, elegant design is not only quick and easy to install, it is more satisfying. Die-cast aluminium wall shoes hold the track securely and slim suspension hangers exceed NHS strength requirements.

#### Suitable for YewdaleKestrel®

Only a system of compatible standards would be acceptable for the only 100% fail-safe anti-ligature solution

available globally. That's why the YewdaleMovatrack® cubicle track is the

only system approved for use with the YewdaleKestrel® Anti-Ligature System.

#### Biosafe Antibacterial Accreditation



Biosafe is an internationally recognised accreditation meaning our systems have been tested under the most stringent measures to ensure effective inhibition of infection.

A Biosafe accreditation means this product is anti-microbial and plays an active role in inhibiting illness.

7

# YewdaleMovatrack® Cubicle Track & Shower Track



#### By Window Treatments NZ Ltd



#### 100 Cubicle Track

#### **Features:**

The rigid, high-grade aluminium track section and wheeled roller hooks are just an introduction to the many features of the YewdaleMovatrack® 100 cubicle track system, which is in use in many hospitals globally. Designed to give years of trouble-free service, this cubicle track system uses die-cast aluminium wall shoes for a secure position where tracks meet the wall, and suspension hangers for a rigid connection to the ceiling, unless directly ceiling fixed. Supplied with a curtain removal point as standard.

#### **Benefits:**

Strength and simplicity make the YewdaleMovatrack® 100 track system the first choice for a full number of applications. The premium quality track system has a strong and attractive aluminium profile which offers you more for less, in that it is able to span 3.0 metres between hangers, providing long term reliability. In a similar fashion, curtain removal points are provided as standard on every track for added convenience when replacing curtains. The self-lubricating roller runner hooks are quickly loaded into the track through this point of access. Complies fully with the requirements of HBN 00-10 Part E.

#### Options:

Silver anodised track; Any RAL colour available to order; Biosafe antibacterial treatment option available within white powder-coated finish only; Cubicle numbering system; Track mounted uplighters; Stainless steel roller hooks or rings.

#### YewdaleMovatrack® shower track:

Ideally suited for use as a shower track in washroom environments due to hygienic, wipe-clean properties.

#### **Specification:**

The YewdaleMovatrack® 100 cubicle track system as manufactured by Yewdale, Ph 0800363639. Track manufactured from premium quality aluminium with silver anodised / white RAL 9016 Satin powder-coated finish, able to span 3.0 metre without support. Double hangers to ensure full functionality of system. Complete with roller runner hooks at 10 per metre, curtain removal points per section and, overlaps as necessary, spaced in accordance with manufacturers recommendations. Flame retardant curtains from the YewdaleHarrier® range. Layout as shown on accompanying drawings. Fitting to be carried out by trained and accredited personnel.

For more information on Operational Maintenance & Guidance, please turn to page 7.

YewdaleMovatrack® is the only approved cubicle track system to be used with YewdaleKestrel® for anti-ligature use.




Find this product on NBS Source




## We've pulled together a top range of curtains!

Find a matching option from the YewdaleHarrier® range. You'll find it easy to choose from, using one of our fabric selectors.



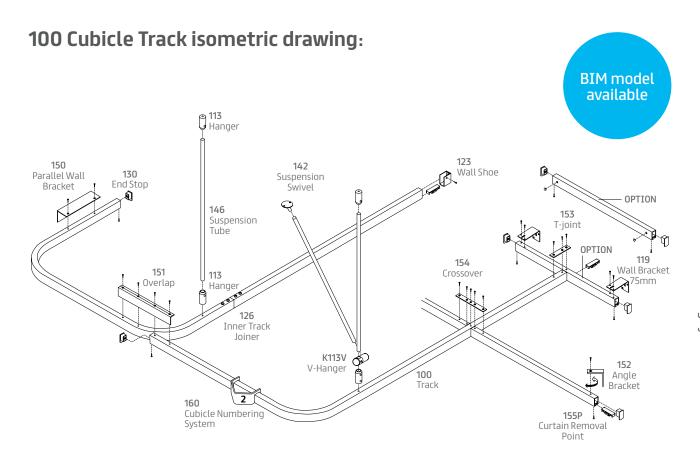

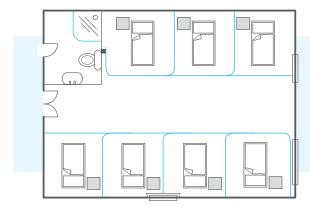

An example of a typical ward layout, showing how YewdaleMovatrack® 100 provides optimum service user privacy.